
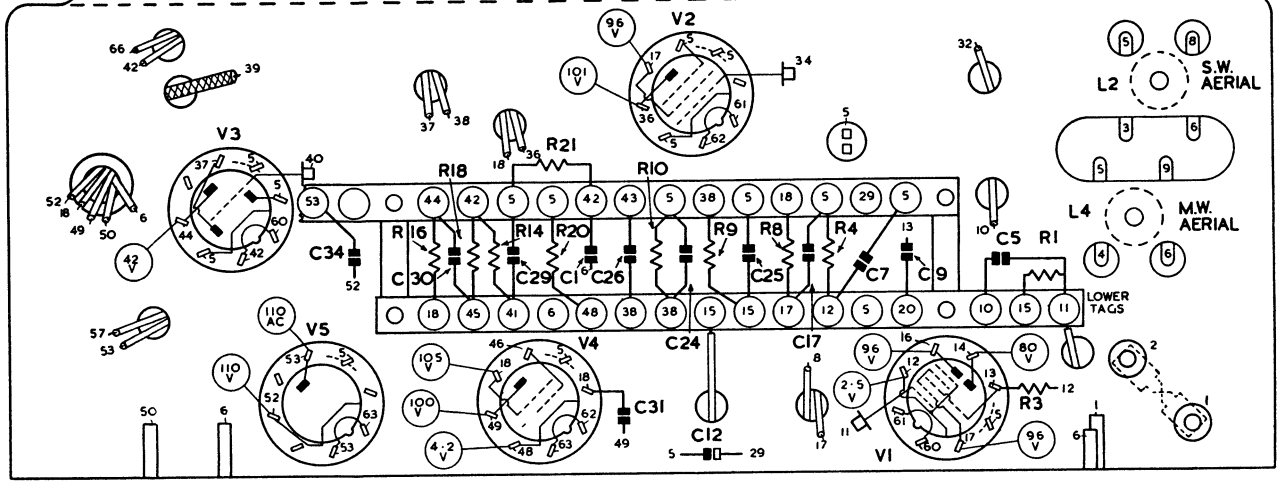


THIS IS A SUPPLEMENTARY SERVICE SHEET FOR THE 100 VOLT MODEL AND IT SHOULD BE USED IN CONJUNCTION WITH THE SERVICE INSTRUCTIONS FOR THE 200 VOLT MODEL WHICH GIVE TRIMMING INSTRUCTIONS, MECHANICAL DETAILS, AND OTHER GENERAL INFORMATION

R				11		16 18	14	21 20		10	2 5 9	8	4				1 3		6 7
C	33	32		34		30	29		1 26 31	24		25	13 17		7	9	20		8
L																		6,5,8,7	2 4
MISC		V3	V5	S2b S2a				V4		V2		S1f	S1e S1d S1c S1a	S1b		VI			

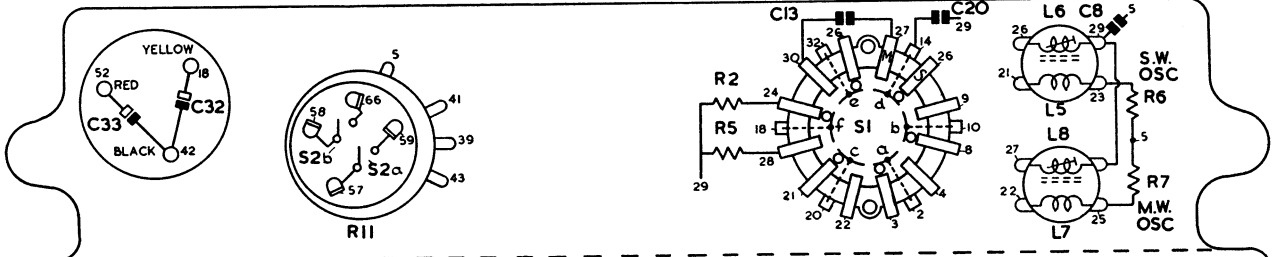

SAD 94S UNDERNEATH VIEW (100VOLT MODEL)

Voltages on valve holders are average figures measured between valve electrodes and chassis, using a 1000 ohms-per-volt meter, with receiver switched to M.W. and working on 110 volt A.C. mains under no signal conditions.

Issued by

**MURPHY RADIO LTD . WELWYN GARDEN CITY  
HERTS . ENGLAND TEL: WELWYN GARDEN 800**